


CDSA TTW-CRT – Comprehensive Balancing Procedure

To Access the Operator Function from the “IN-SERVICE” Screen

1. Open the top cabinet and press the “**OP**” button on the screen.



2. Enter the Operator Password, then press “**ENTER.**”

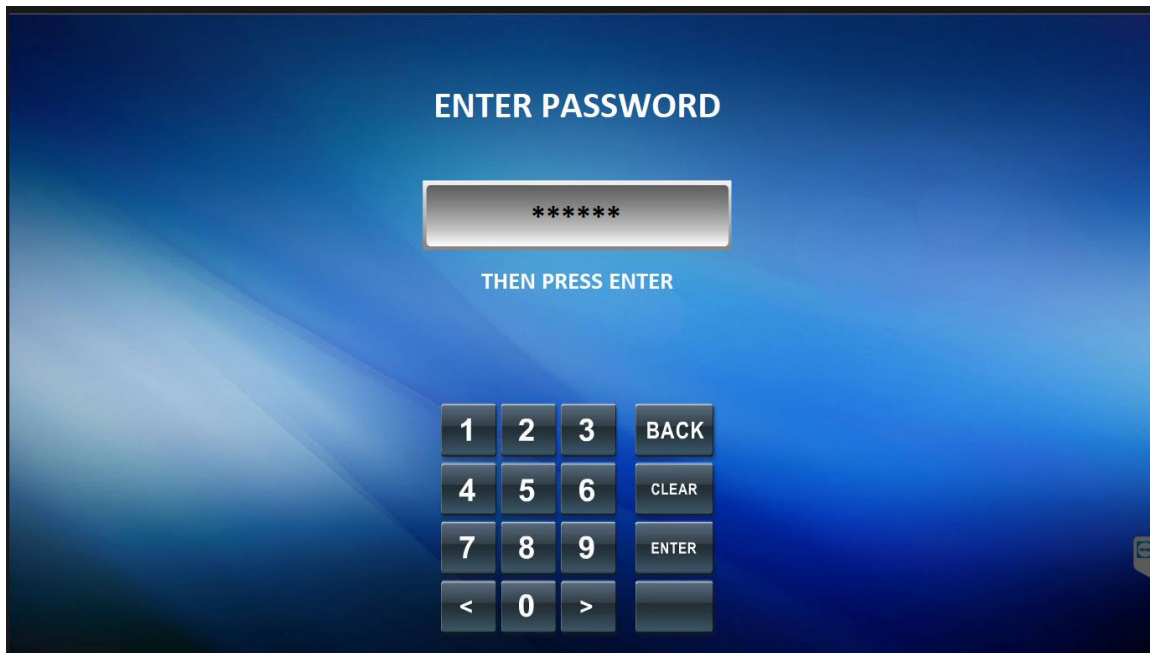



To Clear Cash Totals and Reset to Zero


1. Select "SETTLEMENT"



2. Select "END OF DAY PROCESS"



3. Select "PRINT TOTALS RESET TO ZERO" to print total amounts and reset figures to zero for next day.

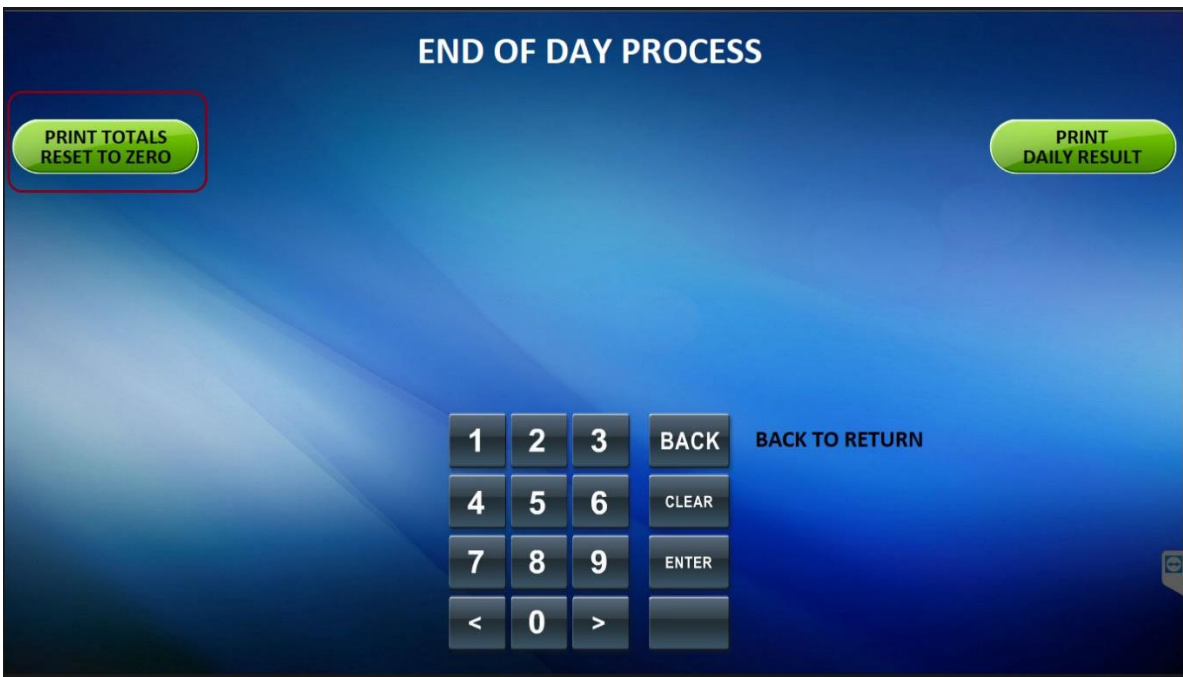


4. Select **“Yes”** to reset the figures.



5. Select **“BACK”** to return to **“SETTLEMENT”**



- If “**END OF DAY PROCESS**” is done correctly, the below screen will show before new totals are entered

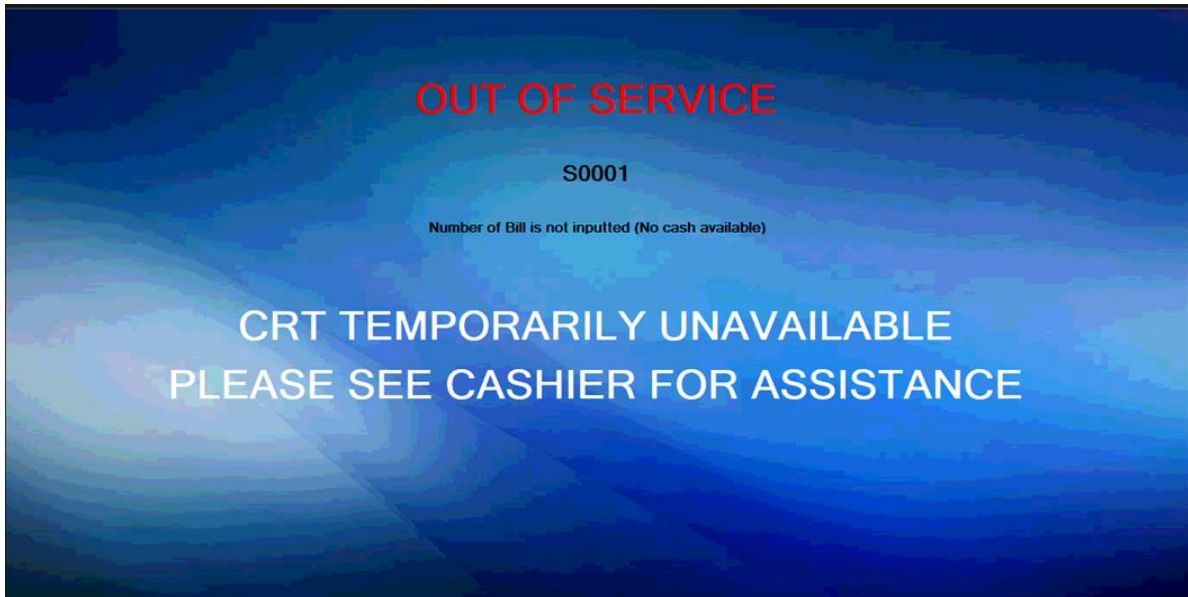

To Load Cash

- Select “**SETTLEMENT**”





2. Select **"INPUT METHOD"** to toggle between entering number of notes, or dollar value.



3. Select **"CHANGE CASH"**



Select **ADD CASH \$5** – enter number of \$5.00 notes or dollar value (per input method you selected)

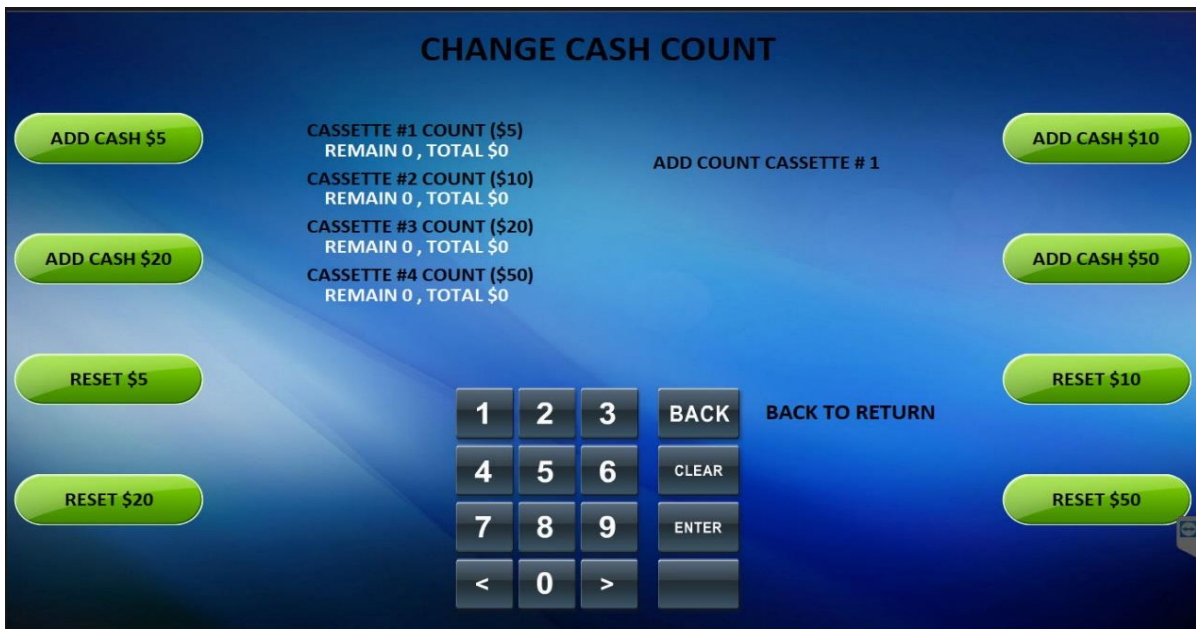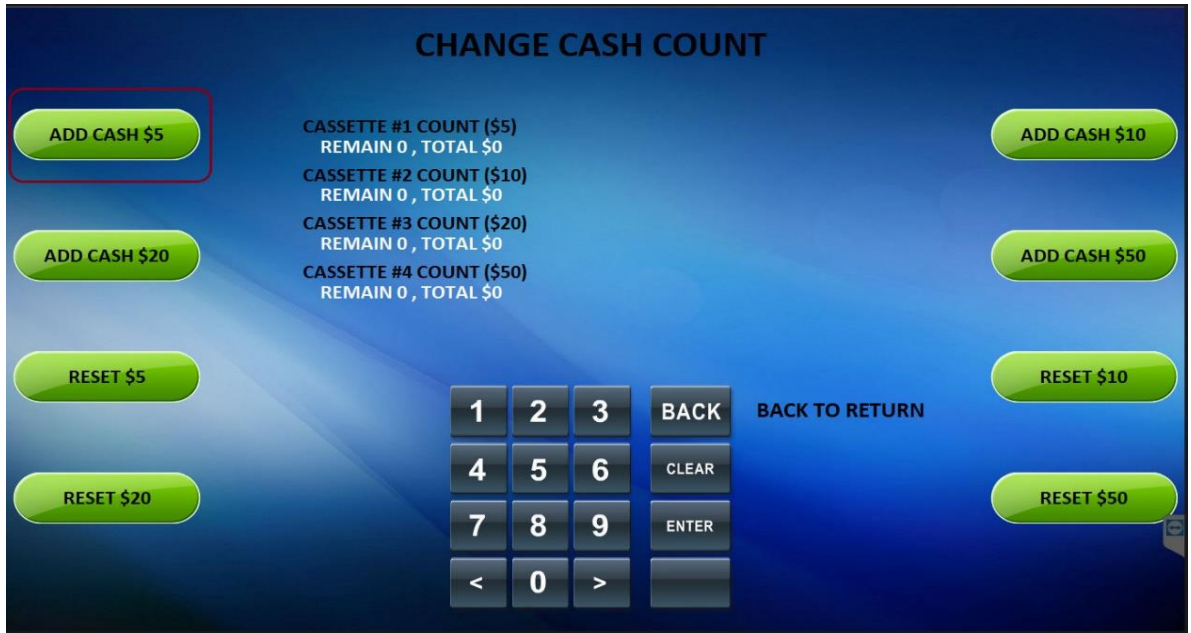

CHANGE CASH COUNT

ADD CASH \$5

ADD CASH \$20

RESET \$5

RESET \$20

CASSETTE #1 COUNT (\$5)
REMAIN 0 , TOTAL \$0

CASSETTE #2 COUNT (\$10)
REMAIN 0 , TOTAL \$0

CASSETTE #3 COUNT (\$20)
REMAIN 0 , TOTAL \$0

CASSETTE #4 COUNT (\$50)
REMAIN 0 , TOTAL \$0

ADD COUNT CASSETTE # 1
100

ADD CASH \$10

ADD CASH \$50

RESET \$10

RESET \$50

1	2	3	BACK	BACK TO RETURN
4	5	6	CLEAR	
7	8	9	ENTER	
<	0	>		

CHANGE CASH COUNT

ADD CASH \$5

ADD CASH \$20

RESET \$5

RESET \$20

CASSETTE #1 COUNT (\$5)
REMAIN 100 , TOTAL \$500

CASSETTE #2 COUNT (\$10)
REMAIN 0 , TOTAL \$0

CASSETTE #3 COUNT (\$20)
REMAIN 0 , TOTAL \$0

CASSETTE #4 COUNT (\$50)
REMAIN 0 , TOTAL \$0

ADD CASH \$10

ADD CASH \$50


RESET \$10

RESET \$50


1	2	3	BACK	BACK TO RETURN
4	5	6	CLEAR	
7	8	9	ENTER	
<	0	>		




Select **ADD CASH \$10** – enter number of \$10.00 notes or dollar value (per input method you selected)

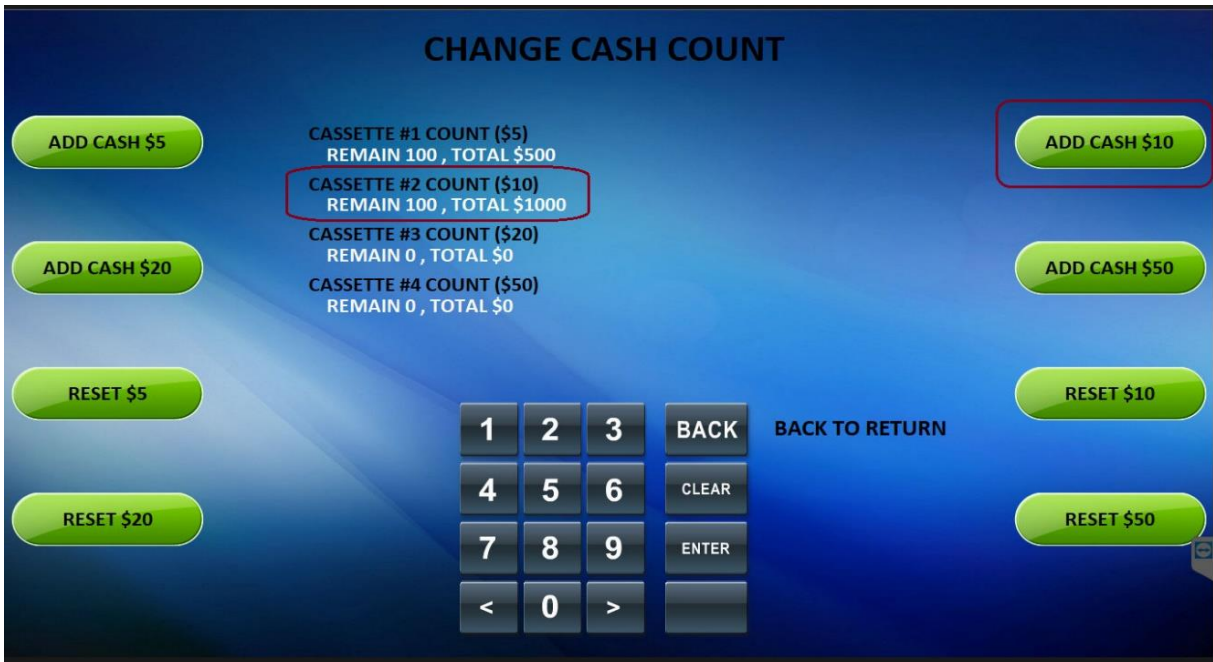


Select **ADD CASH \$20** – enter number of \$20.00 notes or dollar value (per input method you selected)

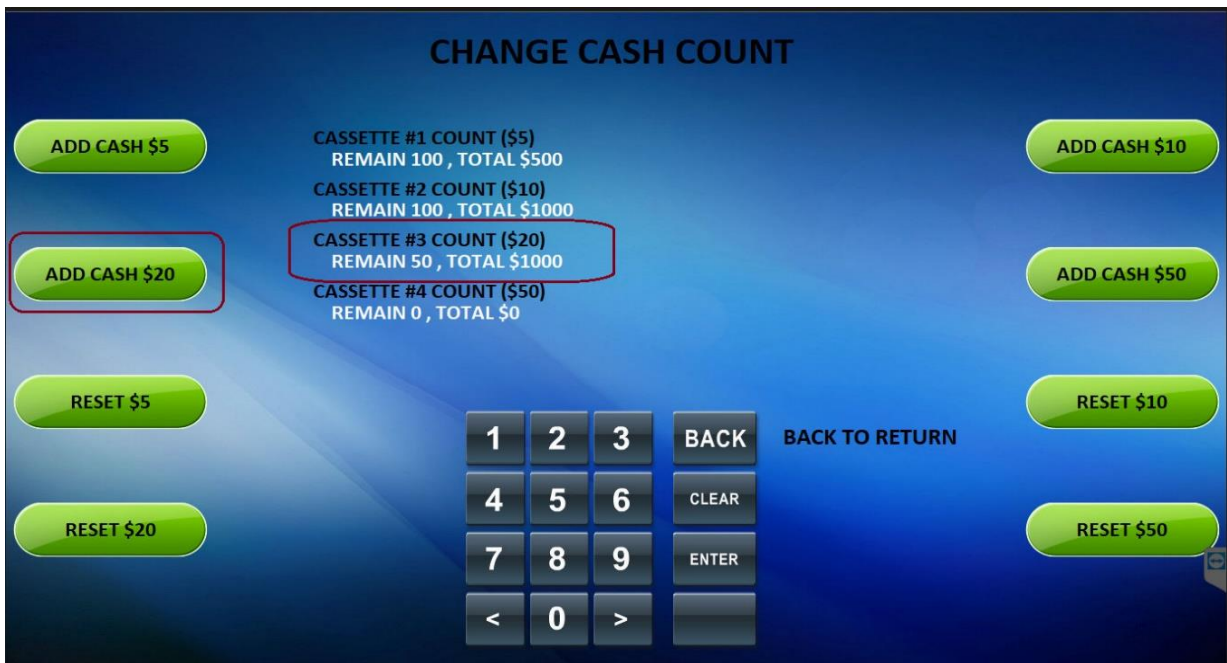

Select **ADD CASH \$50** – enter number of \$50.00 notes or dollar value (per input method you selected)

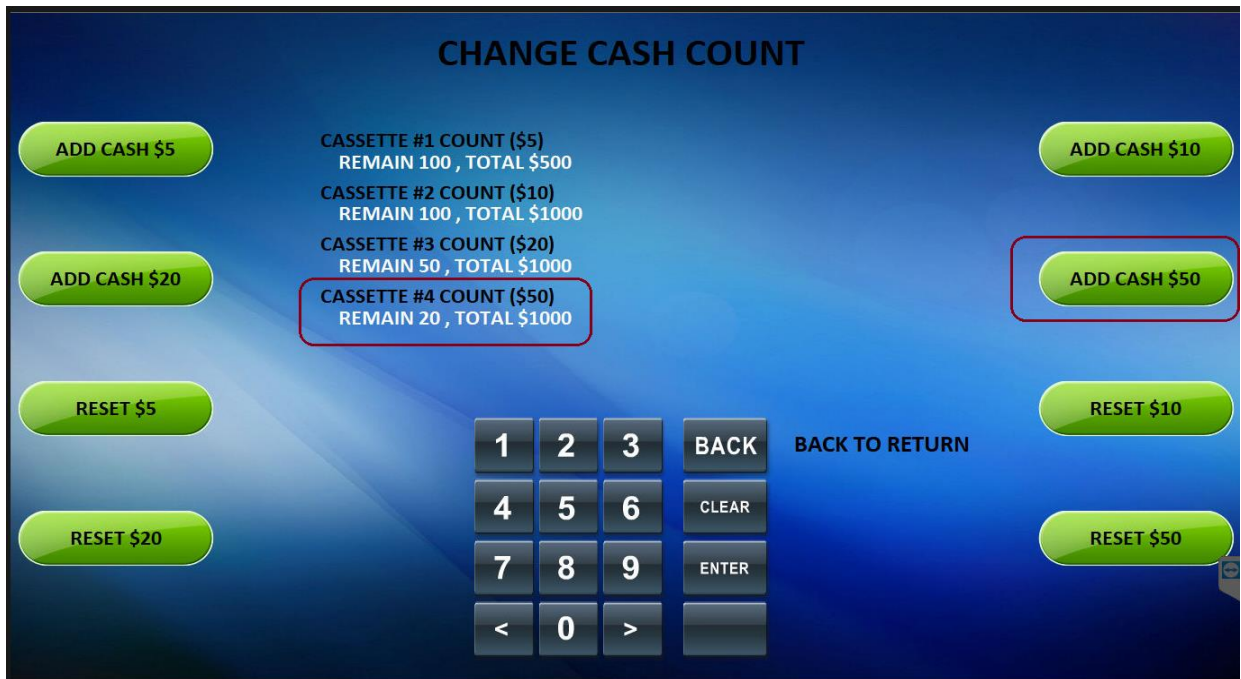


4. Select **"BACK"** to return to previous screen.

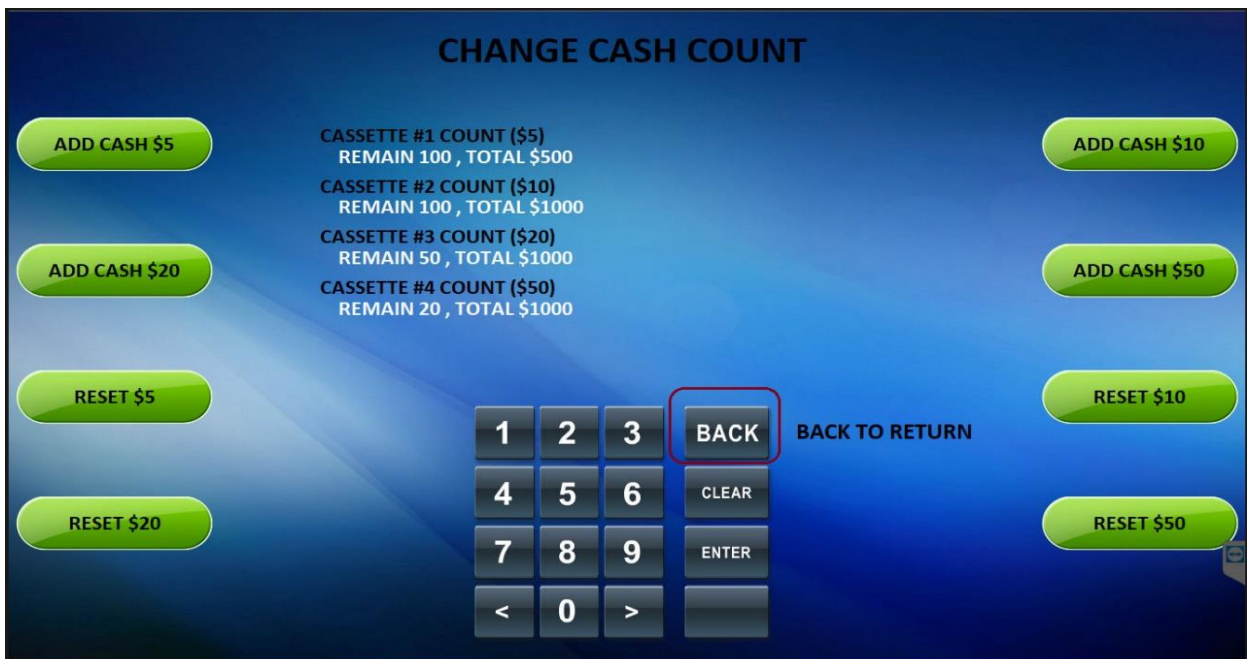


5. Select "CHANGE COIN"




Select **ADD COIN \$0.10** – enter number of \$0.10 coins or dollar value (per input method you selected)

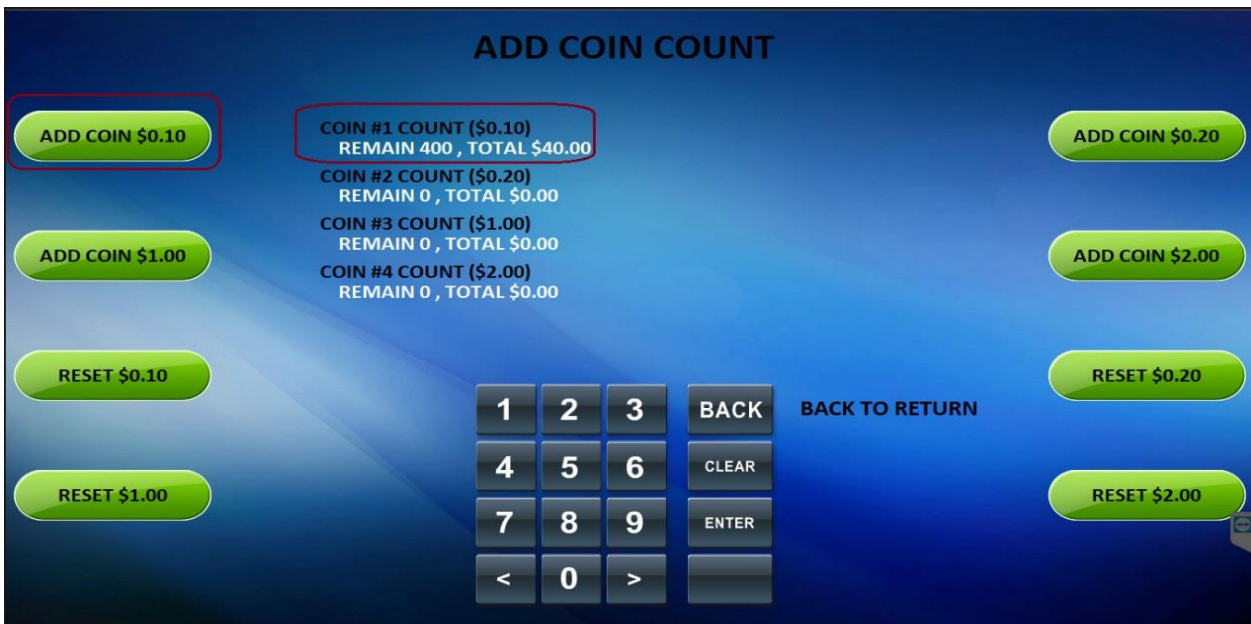


Select **ADD COIN \$0.20** – enter number of \$0.20 coins or dollar value (per input method you selected)

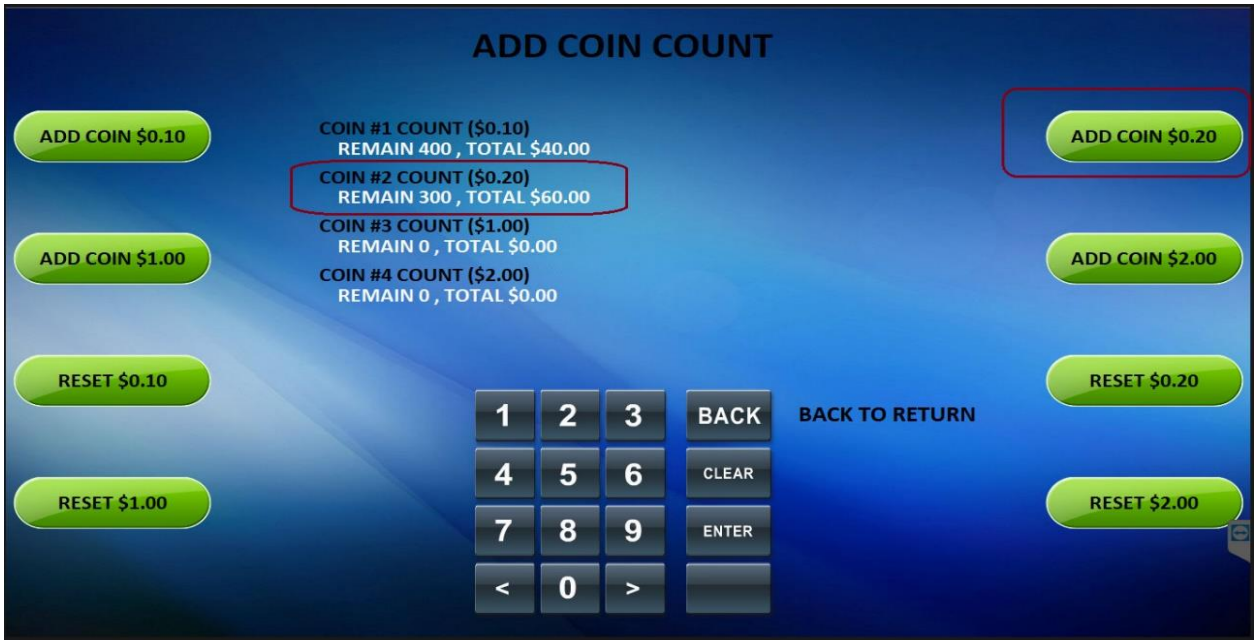


Select **ADD COIN \$1.00** – enter number of \$1.00 coins or dollar value (per input method you selected)

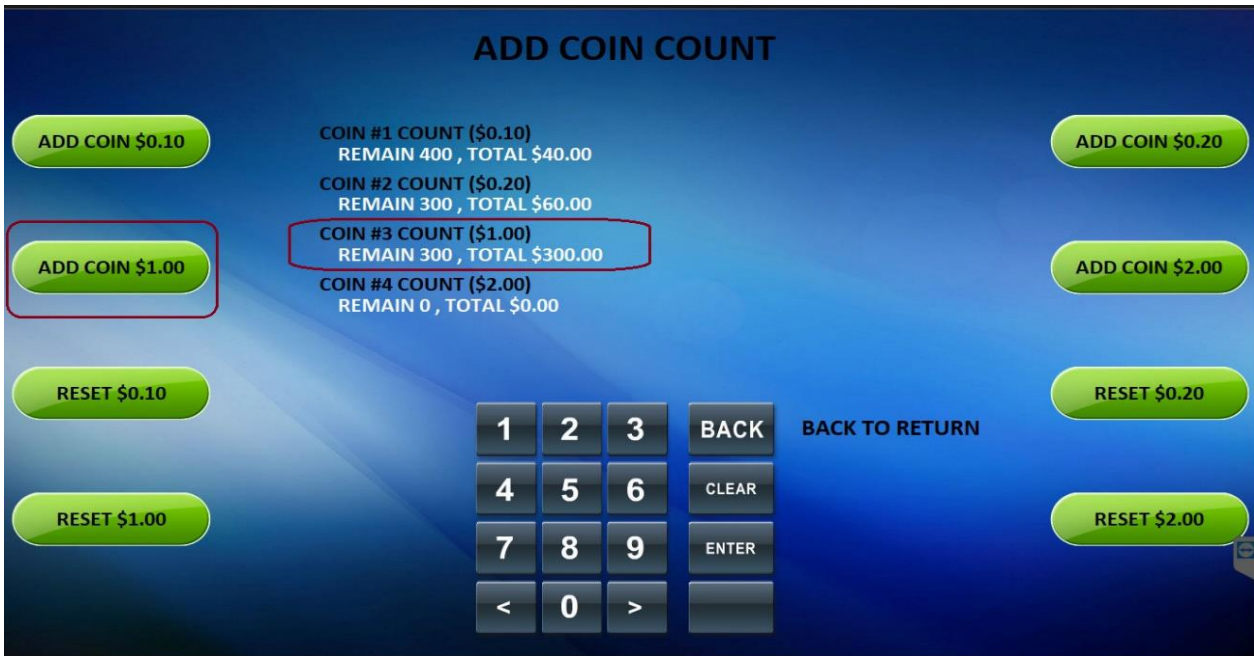

Select **ADD COIN \$2.00** – enter number of \$2.00 coins or dollar value (per input method you selected)

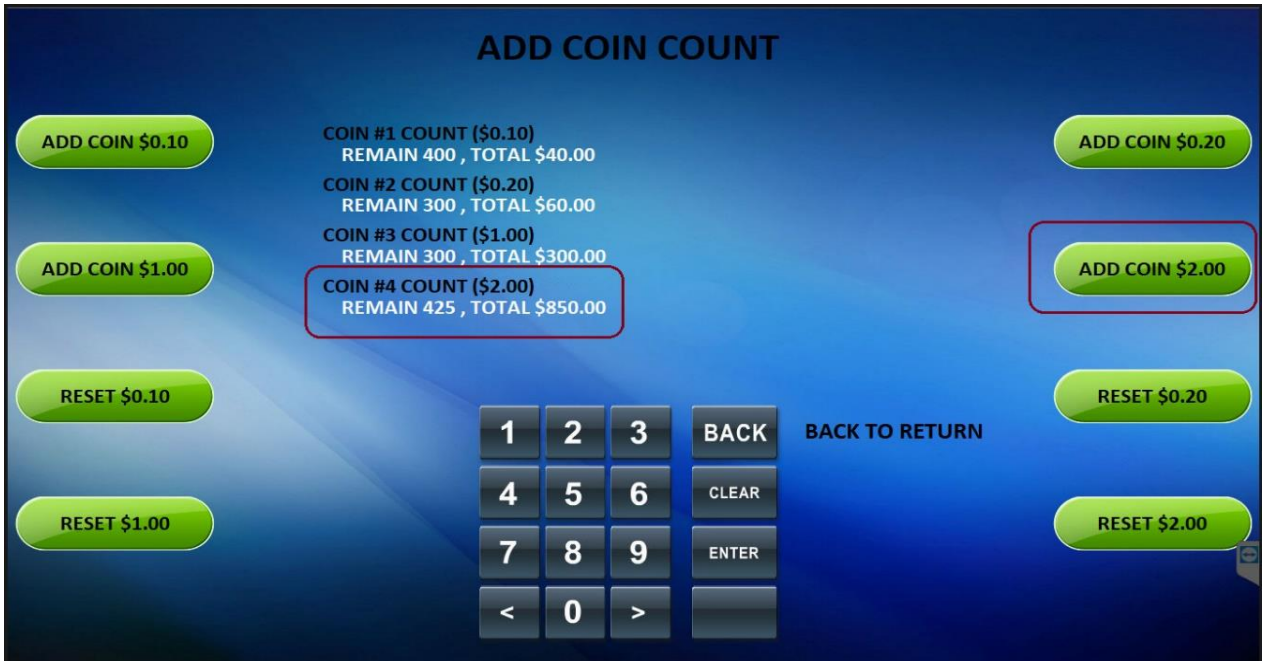


6. Select **“BACK”** twice to return to the main screen.

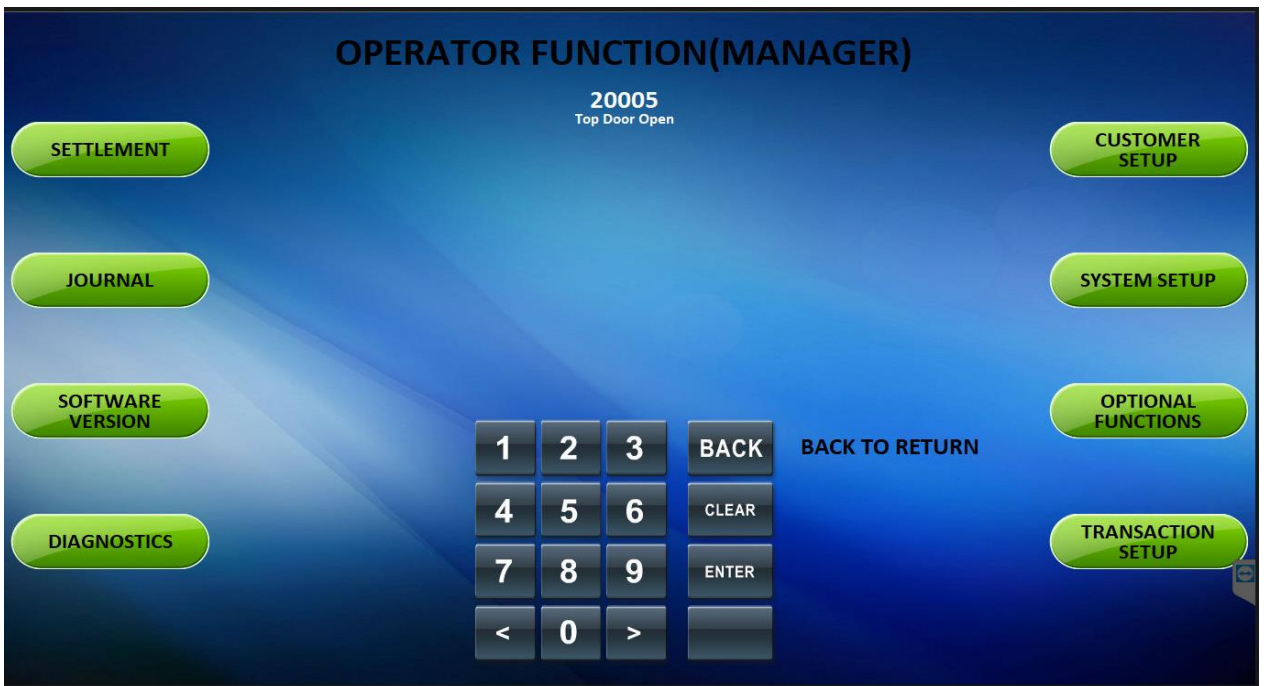

To View Running Total of what the CRT has Dispensed

1. Select **"SETTLEMENT"**

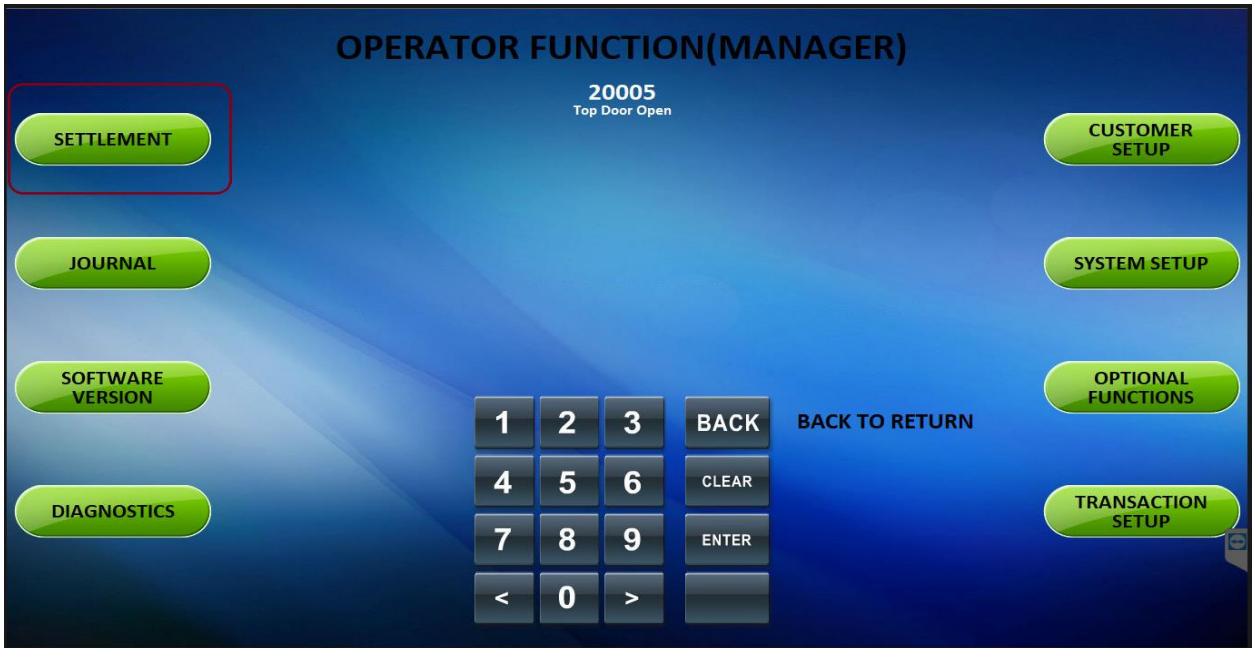

2. Select **"PRINT DAY TOTAL"** to show the amount of cash and coin the CRT has dispensed.



- Select **"PRINT CASSETTE TOTAL"** to show breakdown of what each Cassette & Coin Hopper dispensed.

The screenshot shows the 'SETTLEMENT' screen with the following layout:

- Buttons on the left:** PRINT DAY TOTAL, PRINT CASSETTE TOTAL (highlighted with a red box), PRINT FLOAT, END OF DAY PROCESS.
- Buttons on the right:** CHANGE CASH, CHANGE COIN, EMPTY COINS, INPUT METHOD.
- Central Text:**
 - CASSETTE #1 COUNT (\$5) REMAIN 100 , TOTAL \$500
 - CASSETTE #2 COUNT (\$10) REMAIN 100 , TOTAL \$1000
 - CASSETTE #3 COUNT (\$20) REMAIN 50 , TOTAL \$1000
 - CASSETTE #4 COUNT (\$50) REMAIN 20 , TOTAL \$1000
 - COIN #1 COUNT (\$0.10) REMAIN 400 , TOTAL \$40.00
 - COIN #2 COUNT (\$0.20) REMAIN 300 , TOTAL \$60.00
 - COIN #3 COUNT (\$1.00) REMAIN 300 , TOTAL \$300.00
 - COIN #4 COUNT (\$2.00) REMAIN 425 , TOTAL \$850.00
 - TOTAL AMOUNT \$4750.00
 - INPUT METHOD : NUMBER OF NOTES & COINS
- Input Pad:** A numeric keypad with buttons for 1-9, 0, <, >, BACK, CLEAR, and ENTER. The text 'BACK TO RETURN' is displayed to the right of the keypad.

- Select **"PRINT FLOAT"** to show total cash & coin remaining in each Cassette and Coin Hopper.

The screenshot shows the 'SETTLEMENT' screen with the following layout:

- Buttons on the left:** PRINT DAY TOTAL, PRINT CASSETTE TOTAL, PRINT FLOAT (highlighted with a red box), END OF DAY PROCESS.
- Buttons on the right:** CHANGE CASH, CHANGE COIN, EMPTY COINS, INPUT METHOD.
- Central Text:**
 - CASSETTE #1 COUNT (\$5) REMAIN 100 , TOTAL \$500
 - CASSETTE #2 COUNT (\$10) REMAIN 100 , TOTAL \$1000
 - CASSETTE #3 COUNT (\$20) REMAIN 50 , TOTAL \$1000
 - CASSETTE #4 COUNT (\$50) REMAIN 20 , TOTAL \$1000
 - COIN #1 COUNT (\$0.10) REMAIN 400 , TOTAL \$40.00
 - COIN #2 COUNT (\$0.20) REMAIN 300 , TOTAL \$60.00
 - COIN #3 COUNT (\$1.00) REMAIN 300 , TOTAL \$300.00
 - COIN #4 COUNT (\$2.00) REMAIN 425 , TOTAL \$850.00
 - TOTAL AMOUNT \$4750.00
 - INPUT METHOD : NUMBER OF NOTES & COINS
- Input Pad:** A numeric keypad with buttons for 1-9, 0, <, >, BACK, CLEAR, and ENTER. The text 'BACK TO RETURN' is displayed to the right of the keypad.

